



Before you start:

Make sure the cable blocks are placed COMPLETELY on the piston rods as far as they can go.

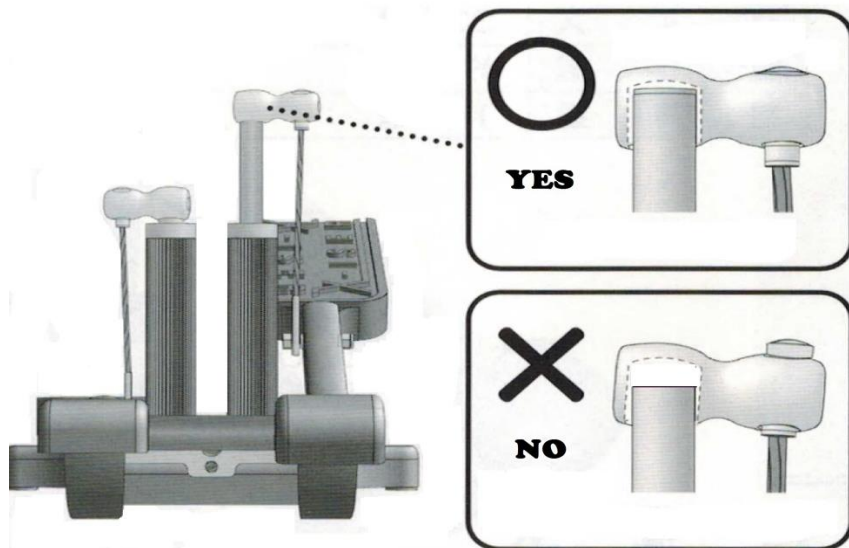

**WRONG**

The cable block on the left is not completely on.

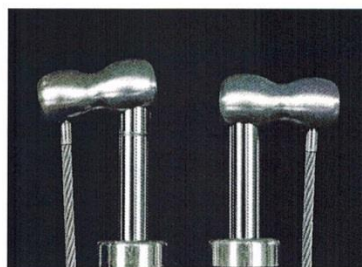

**RIGHT**

The cable block on the right is completely on.

**\*Improper assembly will diminish the life of the cables and cylinder, therefore VOIDING the warranty.**