


Instructions for replacing cable assembly:

1. Put axle bolt (A) through cable end with a hole (B), such that the bolt head is on the indented side.
2. Slide nylon washer (C) on axle bolt.
3. From the **inner** side of the pedal cable retaining hole, slide axle bolt all the way in.
4. Place axle nut (D) on axle bolt and tighten to snug.
5. Loosen axle nut $\frac{3}{4}$ of a turn so that cable end rotates freely.

* **For the life of the cable and the machine, it is essential that the cable moves freely about the bolt.**

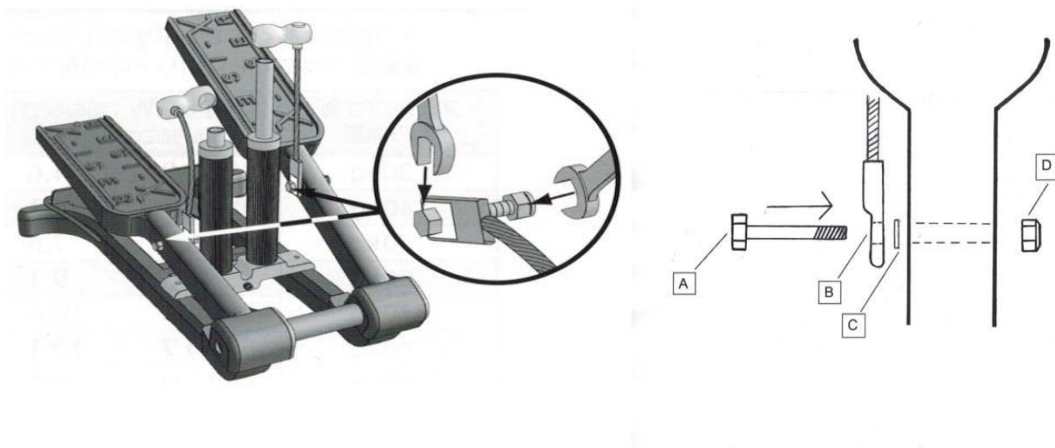

1809 Airway Ave, Fort Collins, CO 80524
contact@xiser.com



[Xiserindustries.com/instructional-resources /](https://www.xiserindustries.com/instructional-resources/)



<https://youtu.be/oXA42ICjr5E>